

Fountain Pen Care

DK Wooden Expressions fountain pens should be treated and cared for like all your our other fine pieces of furniture.

- Periodically flush your pen's nibs with cool water which will help keep dried ink from interfering with ink flow. DO NOT use hot water or solvents to clean nibs.
- Use only inks designed especially for fountain pens.
- When choosing to soak the nib in cool water for cleaning, remove nib assembly from your pen. DO NOT soak any other part of your pen as it will cause damage.
- Make sure you DO NOT lose any small parts during disassembly.
- DO NOT press too firmly when writing as this will damage nib.
- Your fountain pen nibs will adjust to your style of writing, so do not share your pen with others, especially someone opposite-handed from you.

The fountain pens sold at DK's Wooden Expressions will take the standard Universal refills available on our website, Foray Fountain Pen Refills, or Waterman refills.

DK's Wooden Expressions
www.dkwoodexpressions.com